


# Pacific Channel Bracket (Set of 3) - 19mm - SAA

Product Code (U-Bracket): 10504-19MM-SAA

Product Code (L-Bracket): 10505-19MM-SAA

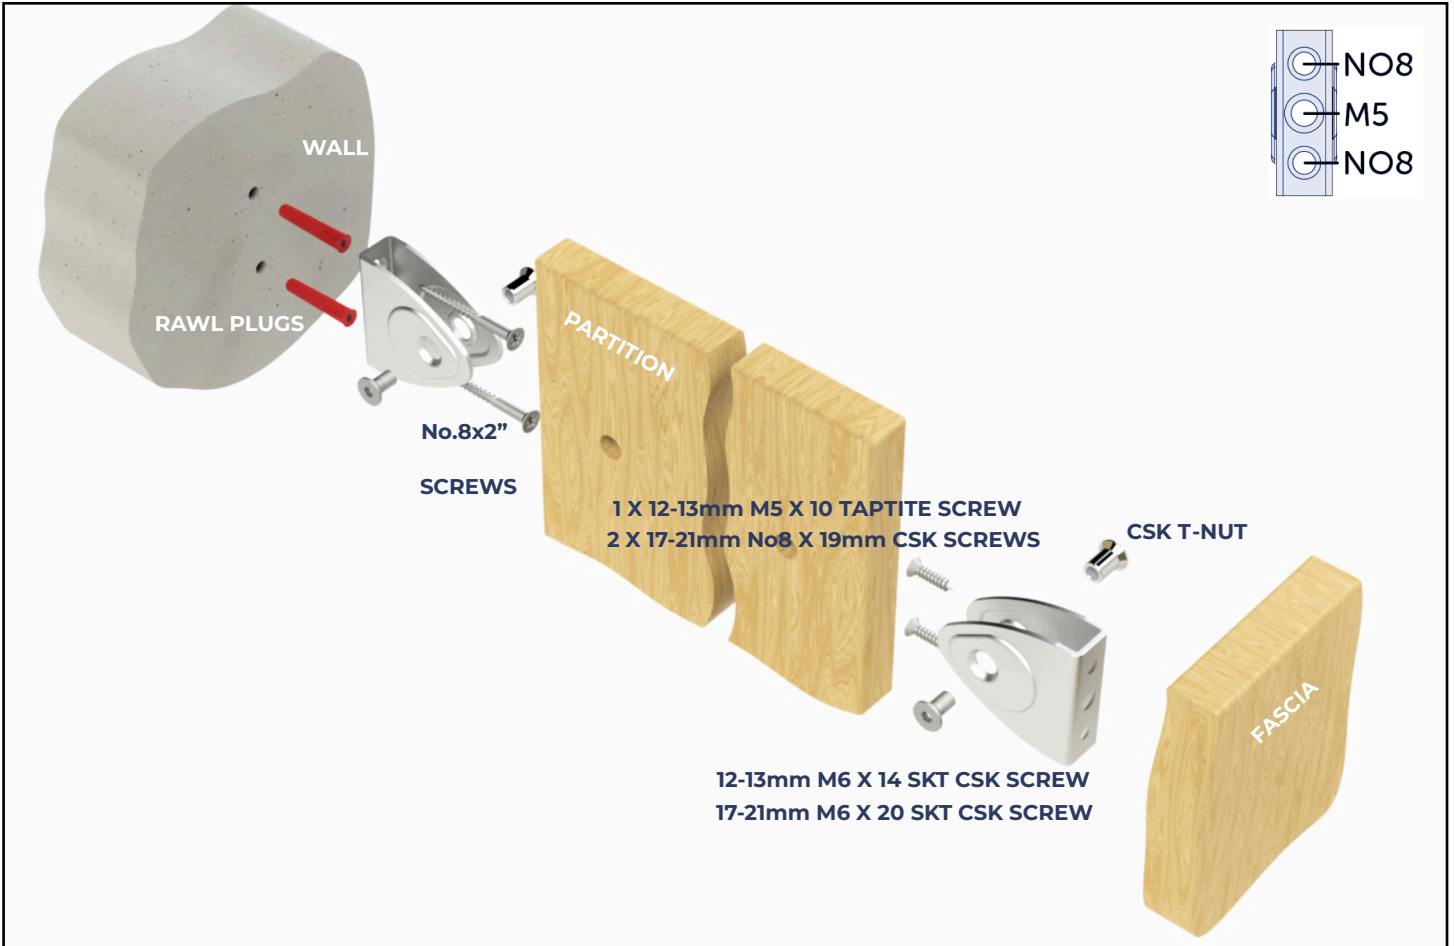

1. Mark off the centreline position on the wall.
2. Determine the position of the brackets on the centreline and mark the two hole positions per bracket.
3. Drill the holes  $\varnothing 5.5$  to a minimum depth of 50mm.
4. Insert the six 32mm plastic plugs into the holes.
5. Secure the brackets to the wall plugs using the No.8 x 2" screws provided.
6. Repeat step one on the fascia panel.
7. Determine the position of the brackets on the fascia and mark off the six hole positions.
8. Use a  $\varnothing 5.5$  drill to drill the six holes 10mm deep accurately.
9. Secure the brackets to the fascia with the M5 taptite screws.
10. Set the partition into the wall brackets ensuring the height and level are correct.
11. Drill through the pre-drilled brackets using a  $\varnothing 9$ mm drill.
12. Secure the panel to the brackets using the CSK T-nuts and M6 CSK screws provided as shown above.
13. Repeat steps 10-12 for the fascia panel fitting to the partition.